

Multichoice HD PVR

Front panel notifications



Normal displays

normal 1		Normal viewing mode on channel 170
normal 2		Standby mode (shows current time)
normal 3		HD PVR is playing back a recording
normal 4		HD PVR is busy recording on tuner 2
normal 5		HD PVR is busy recording on tuner 3
normal 6		HD PVR is busy recording on tuner 2 & 3
normal 7		live TV is paused

Error displays

errors 1		scrolling "HdCP nOt SuPPortEd" HD TV does not support HDCP, or check HDMI cable connection
-------------	--	--

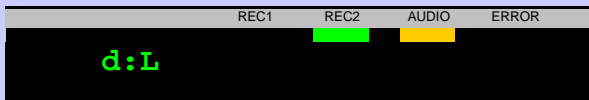
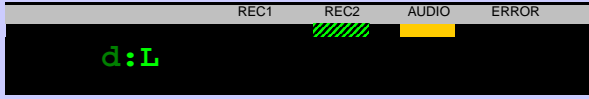
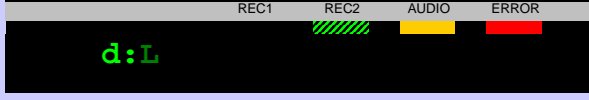
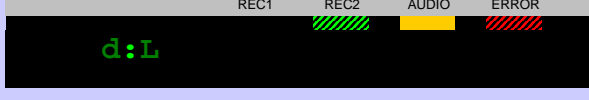
Boot sequence

boot 1		12" 00'00"	
boot 2		3" 00'12"	user may initiate a forced download
boot 3		2" 00'15"	
boot 4		12" 00'17"	spinning 0 rarely can end in BE1 state
boot 5		1" 00'29"	
boot 6		22" 00'30"	
boot 7		8" 00'52"	
boot 8		1" 01'00"	
boot 9		16" 01'01"	video appears on the TV screen

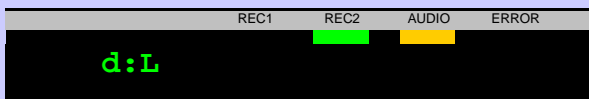
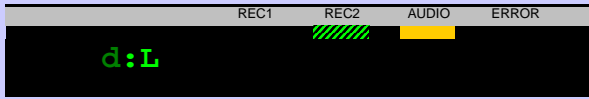
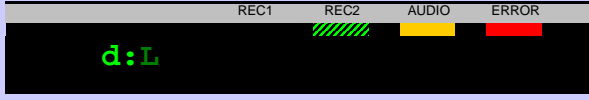
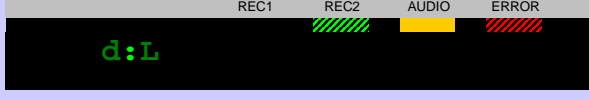
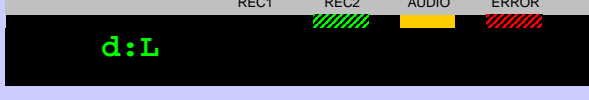
Problems during boot sequence

boot 4a			may appear after "boot 4" indicative of interrupted downloads recoverable with forced download
boot 4b			may appear after "boot 4" indicative of corrupted flash STB must be serviced

Forced download

forced dl 1		Steady d - Steady L Press ON/OFF
forced dl 2		Blinking d - Steady L Press UP
forced dl 3		Steady d - Blinking L Press DOWN
forced dl 4		Blinking d - Blinking L Press ON/OFF

Forced download with automatic software detection

auto dl 1		Steady d - Steady L Press ON/OFF
auto dl 2		Blinking d - Steady L Press UP
auto dl 3		Steady d - Blinking L Press DOWN
auto dl 4		Blinking d - Blinking L Press UP
auto dl 5		Steady d - Steady L Press ON/OFF

Multichoice HD PVR

Front panel notifications



Download errors

dl errors 1		Example error code 8003001b , upper nibble.
dl errors 2		Example error code 8003001b , upper middle nibble.
dl errors 3		Example error code 8003001b , lower middle nibble.
dl errors 4		Example error code 8003001b , lower nibble